


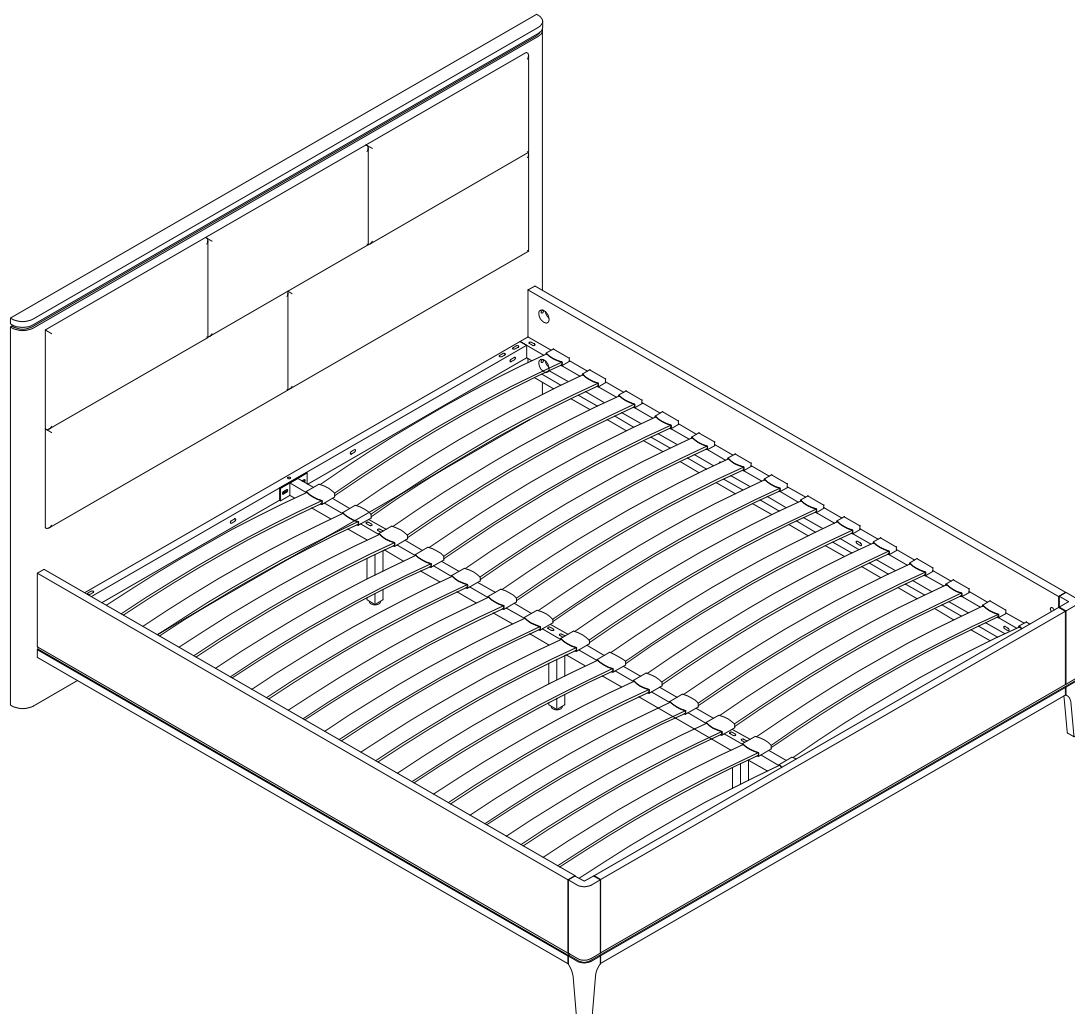




Fratelli Barri

CPM6878




EAC

CPM6878

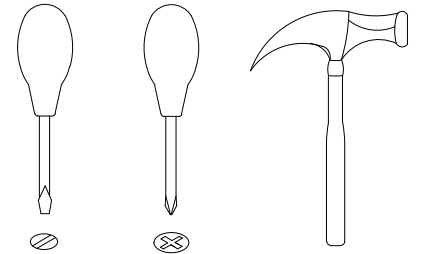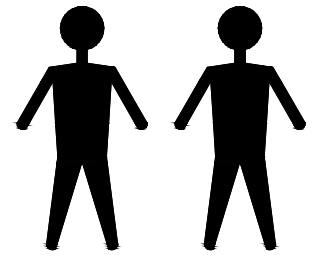


A x8
Spec: $\phi 10 \times L40$



B x4
Spec: $\phi 7 \times L30$



C x4
Spec: $\phi 15 \times H12$



D x4
Spec: $M8 \times L95$



E x4
Spec:



F x4
Spec: M8



G x4
Spec: $\phi 38$




H x8
Spec: $M6 \times L50$




I x4
Spec: $\phi 6 \times \phi 18$




J x4
Spec: M6




K x1
Spec: 10mm




L x1
Spec: 14#




M x1
Spec: 5#




N x1
Spec: 4#



O x6
Spec: 5/16 $\times L60$




P x3
Spec: L230



Q x16
Spec: $M6 \times L45$





R x22
Spec: $\phi 8 \times \phi 18$

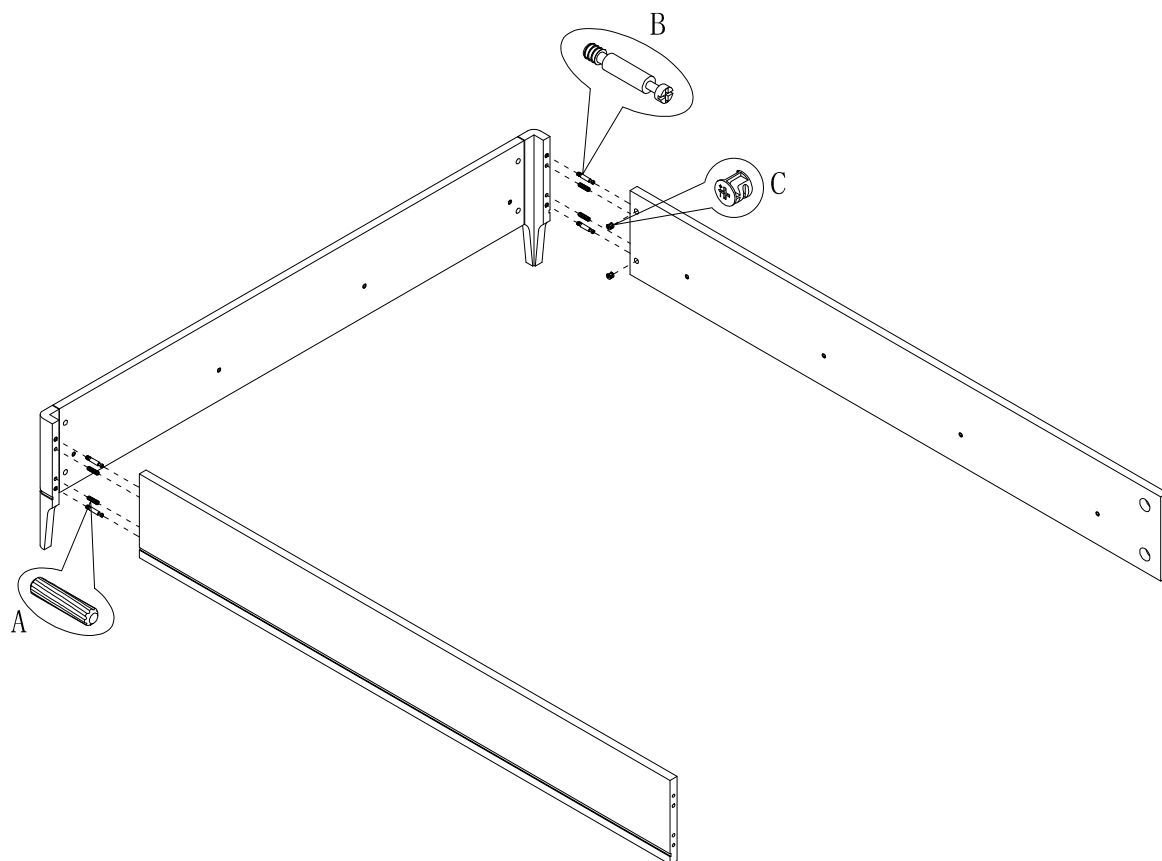

1


2

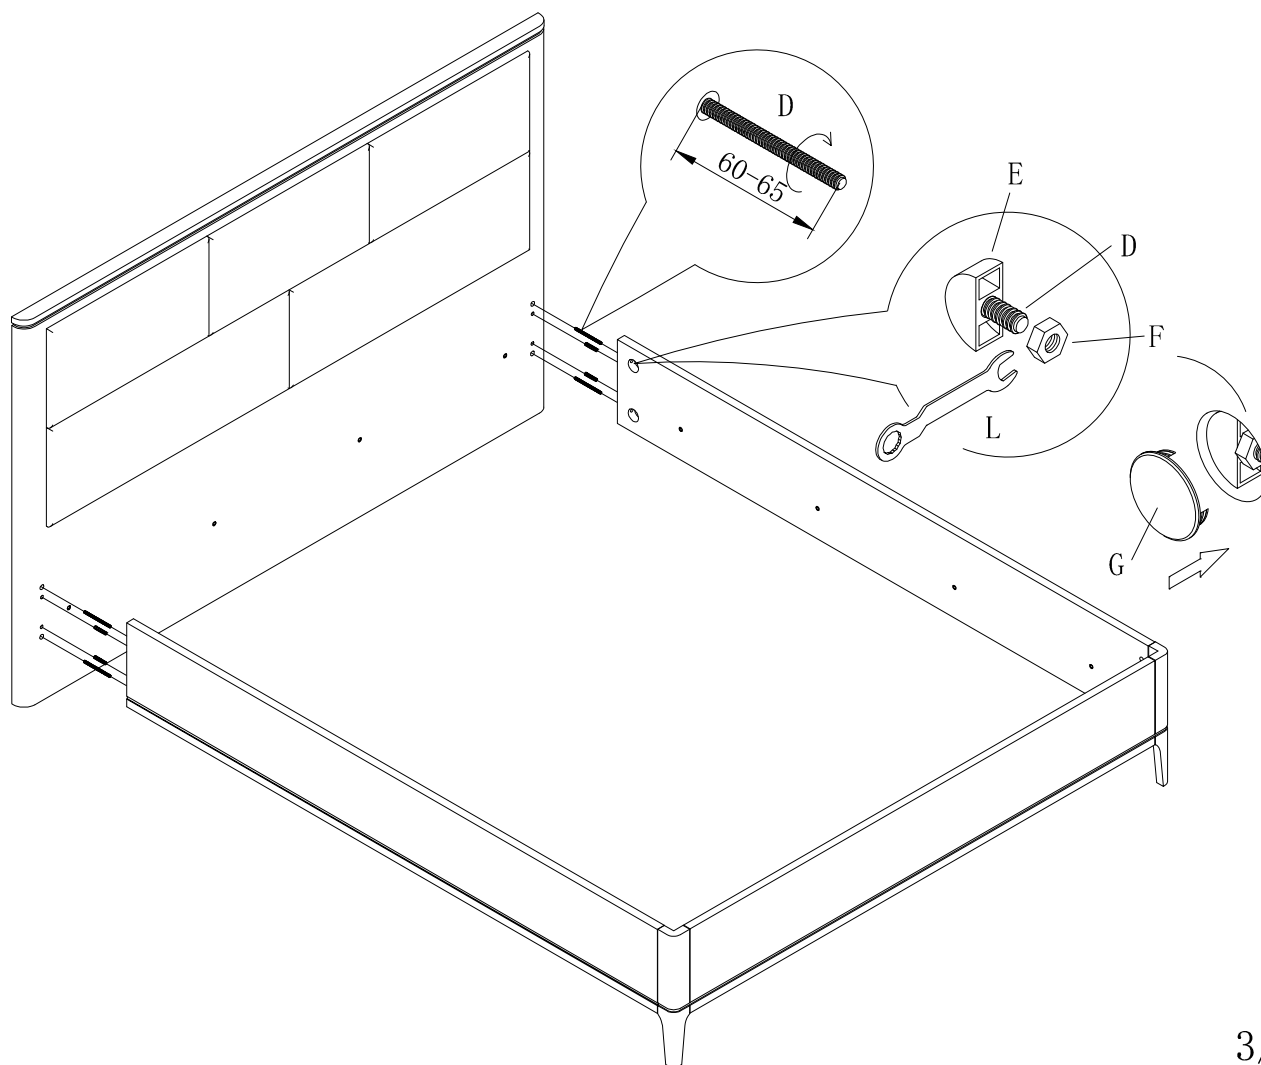


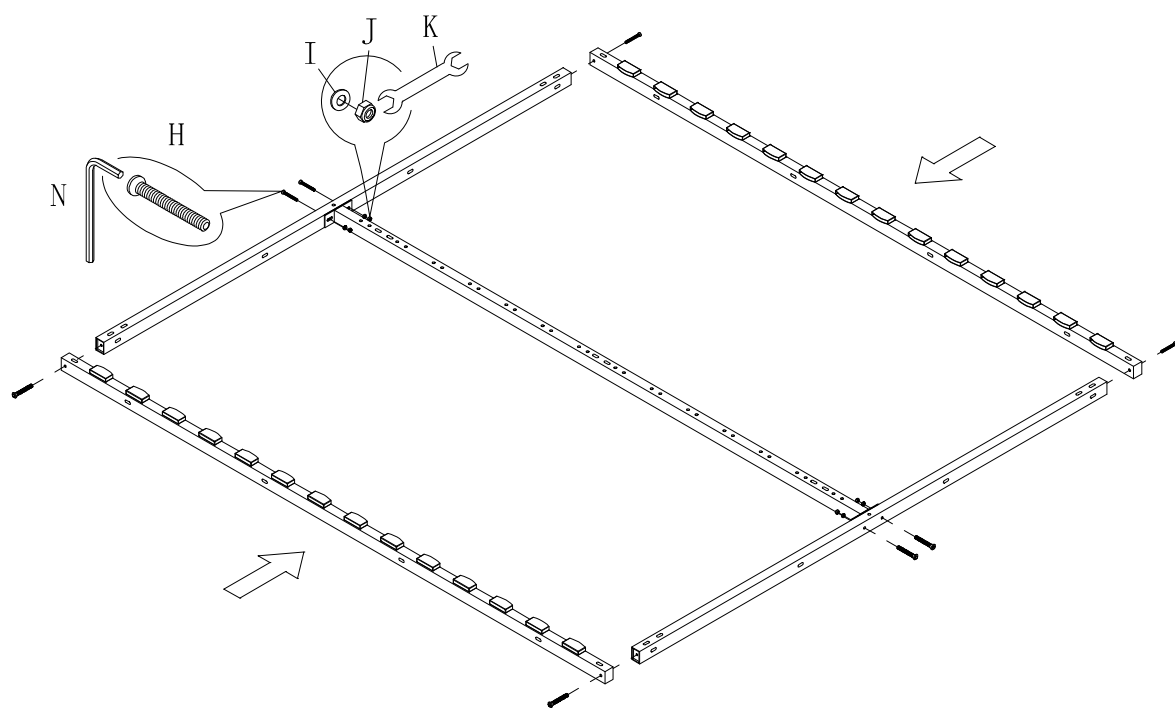


3

4

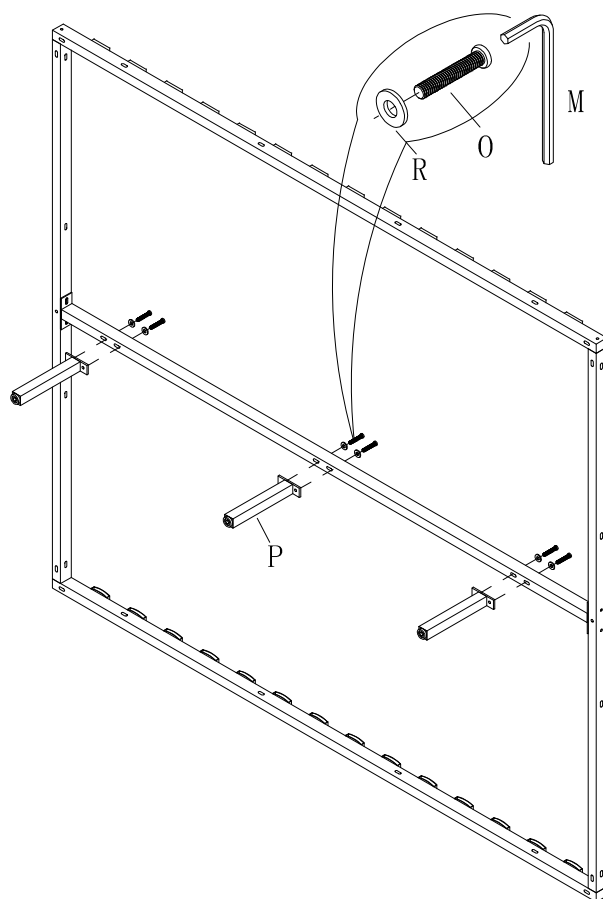

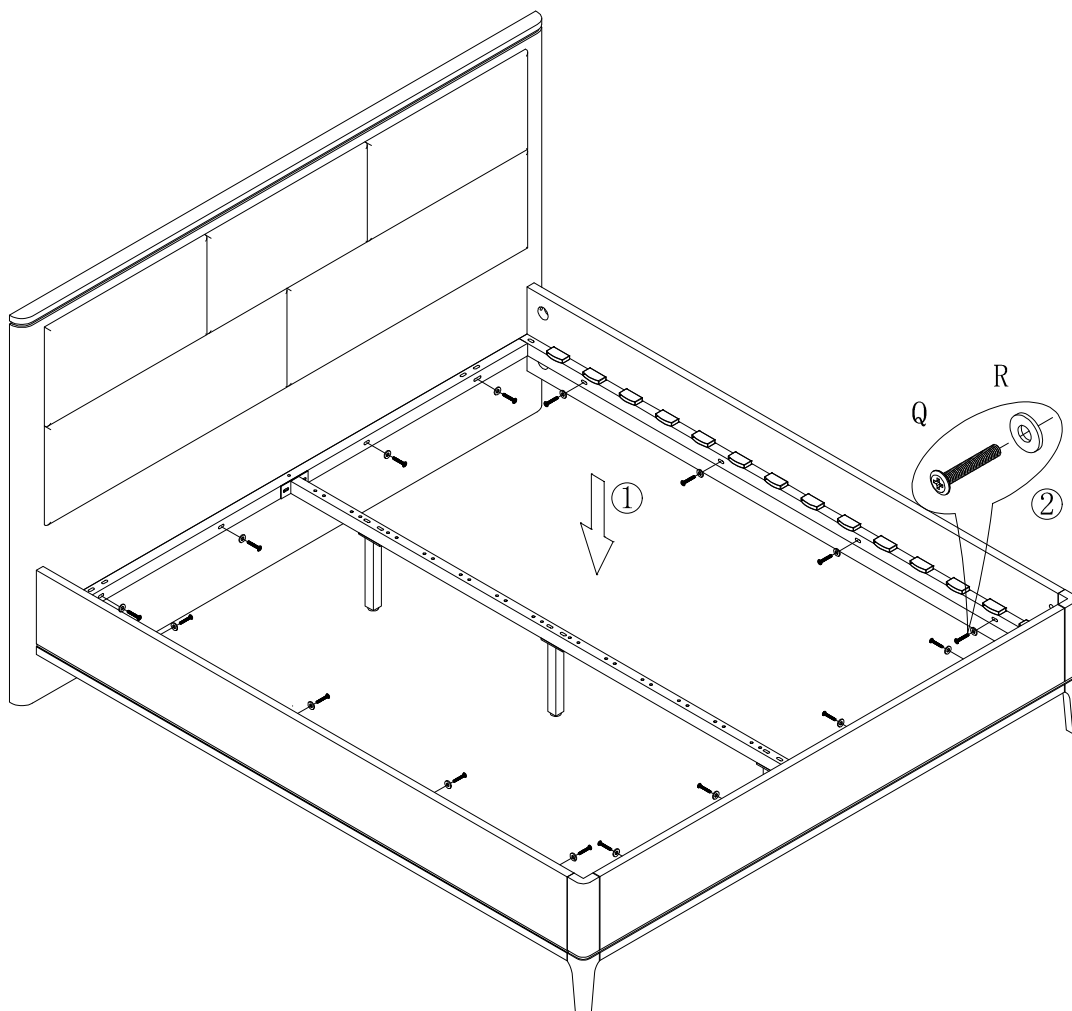

5

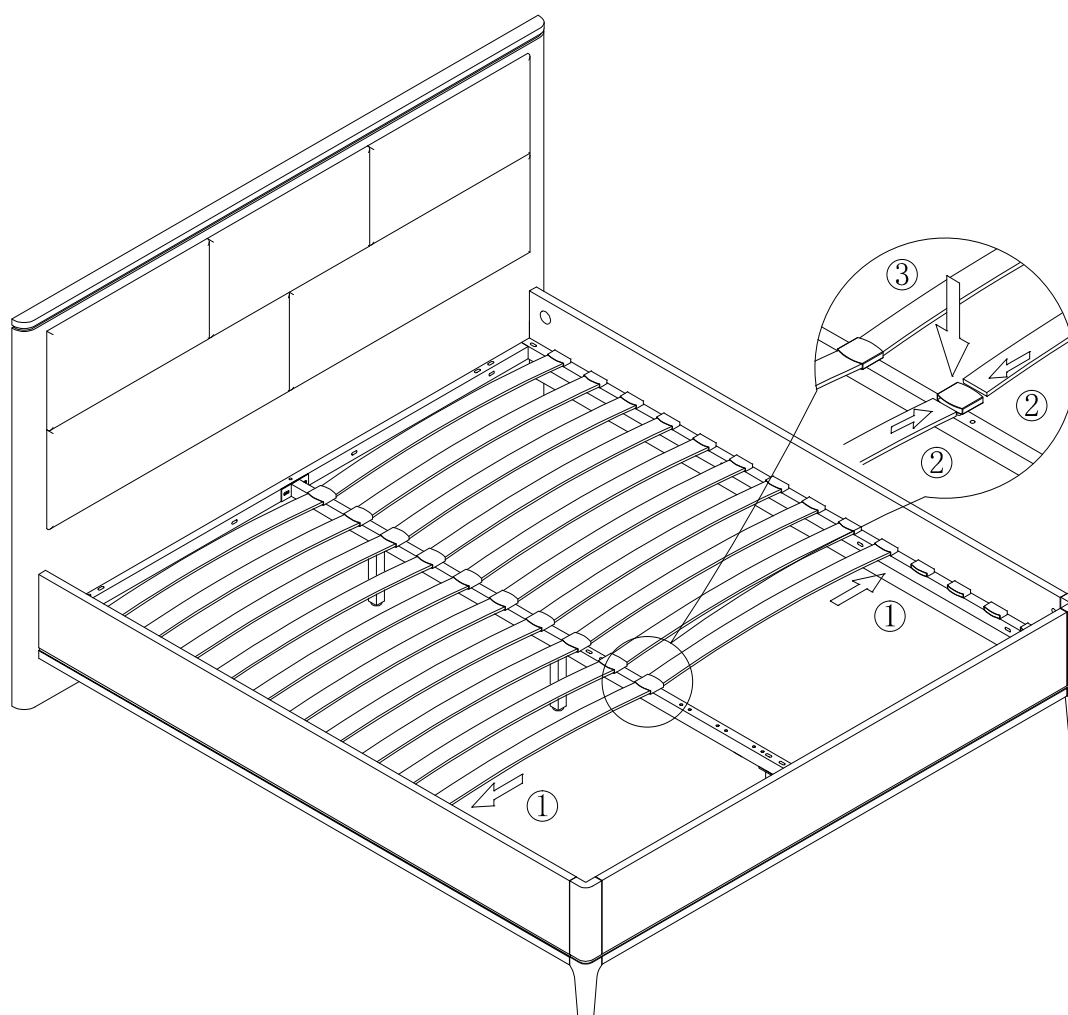

6